


## Head-End Station **STC 160** 4 x Digital MPEG2 Encoder to IP

**HDE 166**

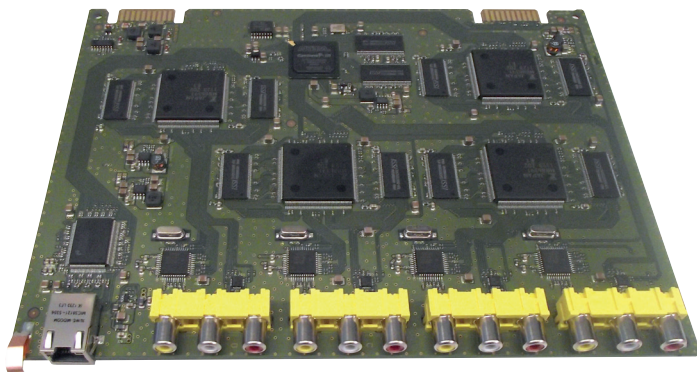

### Notes on the Assembly Instructions.

As well as this supplementary Assembly Instructions, the Assembly Instructions for the STC 160 apply.



GSS  
Grundig SAT Systems GmbH  
Beuthener Strasse 43  
D-90471 Nuremberg

Phone: +49 (0) 911 / 703 8877  
Fax: +49 (0) 911 / 703 9210  
E-mail: [info@gss.de](mailto:info@gss.de)  
Internet: <http://www.gss.de/en>

<b>1</b>	<b>Safety regulations .....</b>	<b>3</b>
<b>2</b>	<b>General information .....</b>	<b>4</b>
2.1	Scope of delivery .....	4
2.2	Meaning of the symbols used .....	4
2.3	Technical data .....	4
2.4	Description .....	5
<b>3</b>	<b>Installation .....</b>	<b>6</b>
3.1	Installing the Encoder module .....	7
3.2	Connecting the Encoder module .....	8
3.3	EMC regulations .....	8
<b>4</b>	<b>The control panel at a glance .....</b>	<b>9</b>
4.1	Functions of the control panel buttons .....	9
4.2	Menu items .....	9
<b>5</b>	<b>Programming .....</b>	<b>10</b>
5.1	Programming procedure .....	10
5.2	Programming the module .....	12
	Selecting the module / channel strip .....	13
	Ethernet parameters .....	13
	IP address of the cassette .....	14
	Address range (subnet mask) .....	14
	Address of the gateway .....	15
	UDP port .....	15
	IP output signal .....	16
	Output IP address .....	17
	Destination MAC address .....	17
	Transmission protocol / Port number .....	18
	Quantity of data packets .....	19
	Forward error correction / Transmission channel .....	19
	Transport stream ID and ORGNET ID .....	20
	Input parameter .....	20
	Data rate of the video signal .....	21
	TV standard .....	21
	Aspect ratio .....	22
	Sharpness .....	22
	Audio signal type and bit rate .....	22
	Level of the audio signal .....	23
	Programme number (SID - Service ID) .....	23
	Channel name .....	24
	Factory reset .....	24
	Saving settings .....	25
<b>6</b>	<b>Final procedures .....</b>	<b>26</b>

# 1 SAFETY REGULATIONS



- The standards EN/DIN EN 50083 resp. IEC/EN/DIN EN 60728 must be observed.
- Do not perform installation and service work during thunderstorms.
- Assembly, installation and servicing should be carried out by authorised electricians.
- Switch off the operating voltage of the system before beginning with assembly or service work.
- Avoid short circuits!
- Observe the relevant standards, regulations and guidelines on the installation and operation of antenna systems.
- To ensure electromagnetic compatibility, make sure all connections are tight and the covers are screwed on securely.
- No liability is accepted for damage caused by faulty connections or inappropriate handling of the device.



Check the head-end station according to the safety instructions listed in their assembly instruction.



Take precautions to prevent static discharge when working on the device!



**Electronic devices should never be disposed of in the household rubbish. In accordance with directive 2002/96/EC of the European Parliament and the European Council from January 27, 2003 which addresses old electronic and electrical devices, such devices must be disposed of at a designated collection facility. At the end of its service life, please take your device to one of these public collection facilities for proper disposal.**

## 2 GENERAL INFORMATION

### 2.1 SCOPE OF DELIVERY

- 1 Module HDE 166
- 1 LAN cable
- 1 Brief assembly instructions

 
### 2.2 MEANING OF THE SYMBOLS USED



Important note



General note



Optional use of the buttons



Performing works

### 2.3 TECHNICAL DATA

The devices meet the following EU directives:  
2006/95/EC, 2004/108/EC

The product fulfils the guidelines and standards for CE labelling (page 27).

Unless otherwise noted all values are specified as "typical".

#### CVBS Video Inputs:

Standard: .....DIN EN 50049-1  
Input level: ..... 1 V<sub>pp</sub>  
Input impedance: ..... 75 Ω  
Frequency range: ..... 20 Hz ... 5 MHz

#### Audio Inputs:

Standard: .....DIN EN 50049-1  
Input level: ..... 500 mV<sub>rms</sub>  
Input impedance: ..... 10 kΩ  
Frequency range: ..... 20 Hz ... 15 kHz

#### MPEG2 Encoder:

Transport stream: ..... MPEG2 (ISO/IEC 13818-1)  
Video data stream: ..... MPEG2 (ISO/IEC 13818-2)  
Audio data stream: ..... MPEG1 (ISO/IEC 11172-3)  
Output data rate: ..... 2 Mbit/s... 15 Mbit/s  
Audio data rate: ..... 192 kb/s...384 kb/s

## LAN Interface

Standard ..... 10/100/1000 MB/s  
 Transport stream(s) ..... 1 MPTS (Multi Programme Transport Stream)  
 or 4 SPTS (Single Programme Transport Stream)  
 Protocols ..... UDP (User Data Protocol),  
 RTP (Real-Time Transport Protocol)

## Connections:

Audio inputs: ..... 4 x 2 Cinch sockets  
 CVBS Video inputs: ..... 4 Cinch sockets,  
 LAN ..... 1 RJ 45 socket  
 Connection strip (20-pin): ..... for supply voltages and control circuit


## Remote maintenance

Remotely controllable (via PSW 160\*): ..... yes  
 (\* and a corresponding management unit)

## 2.4 DESCRIPTION

The 4xMPEG2 encoder module converts four analogue audio and video signals (transport streams) and emits them via the Ethernet output.

The bit rates (audio and video) are adjustable.

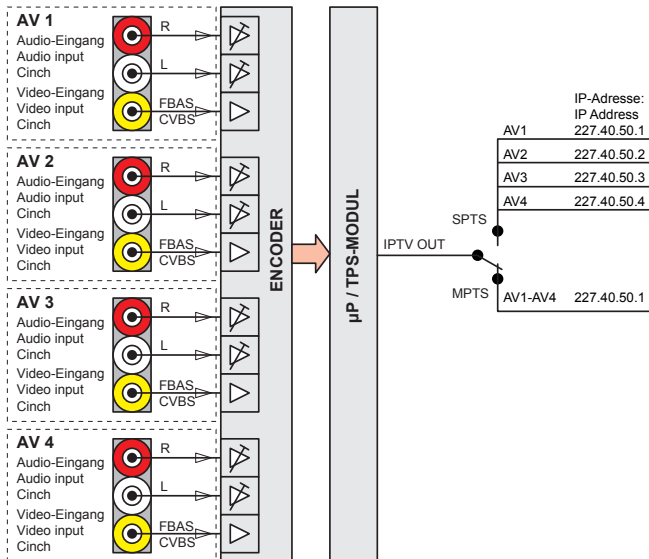

The module is equipped with four video/stereo audio inputs. The fed in analogues signals are digitized and supplied to an encoder that encodes them in real time. The stereo audio signals are transferred via an adjustable amplifier to the encoder.

At the Ethernet socket (RJ45) up to four SPTS transport streams or one MPTS transport stream (Multi Programme Transportstreams) according to UDP or RTP protocol is output.

When the head-end station is switched on, the two-line LC display shows the "**SETUP**" menu and the software version of the control unit.

To operate the encoder module the software version of the control unit (head-end station) must be "**V 10**" or higher. The operating software of the encoder module and the head-end station can be updated using a PC and the software "**BE-Flash**" via the 9-pin D-SUB socket on the head-end station. You can find the current operating software for the head-end station and the encoder module, the software "**BE-Flash**" and the current assembly instructions on the website "[www.gss.de/en](http://www.gss.de/en)".

The encoder module is designed exclusively for use in the STC 160 head-end station.

### 3 INSTALLATION




- Ensure the head-end station is mounted so it will not be able to vibrate. Avoid, for example, mounting the head-end station onto a lift shaft or any other wall or floor construction that vibrates in a similar way.
- Before installing or changing a module, switch off the head-end station or unplug the power cable from the mains power socket.



- Take measures to protect against ESD!
- Open the housing of the head-end station in accordance with the assembly instructions for the STC 160.


### 3.1 INSTALLING THE ENCODER MODULE

- When installing a module, make sure that it is inserted in one of the long, numbered grooves in front of the contact strip on the board at the rear wall of the housing.
- The shorter, non-numbered grooves without a contact strip on the board at the rear wall of the housing are for add-on modules only.
- Open the housing of the head-end station in accordance with the assembly instructions for the STC 160.
- Open the locking device (A) in the direction of the green arrow.

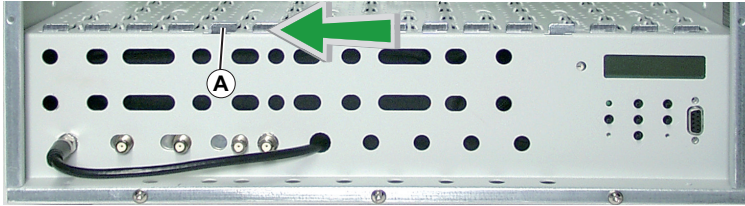


- Insert the Encoder module in grooves (B) of an open slot (with contact strip on the board at the rear wall of the housing) and gently slide it into the head-end station until it makes contact with the board on the rear wall.
- After installing the Encoder module close the locking device (A) in the direction of the red arrow.

→ Ensure that the ground spring (C) gets contact to the locking device.

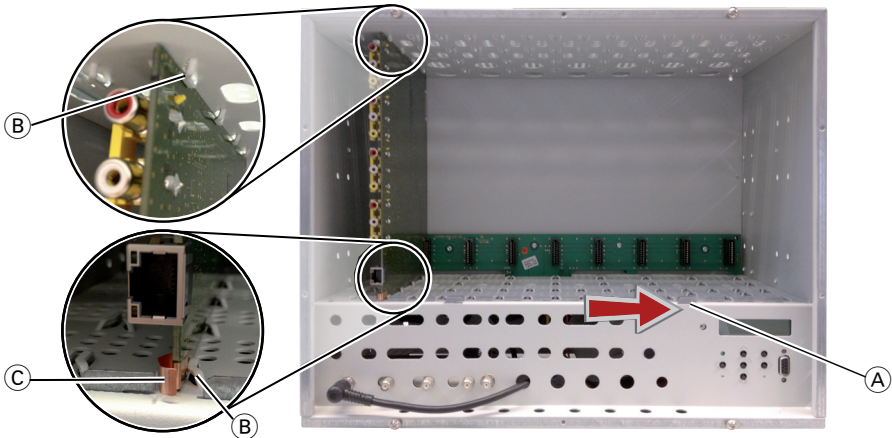

## 3.2 CONNECTING THE ENCODER MODULE

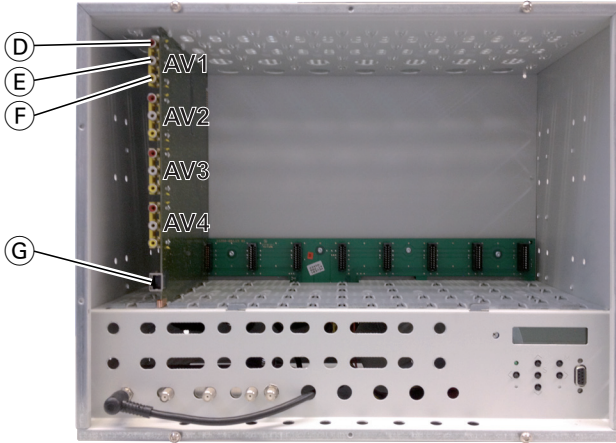


- Connect the audio inputs (D) (right channel) / (E) (left channel) and video inputs (F) to corresponding signal sources.
- Connect the LAN output (G) to the LAN input of a downstreamed component.

## 3.3 EMC REGULATIONS



To comply with the current EMC regulations, it is necessary to connect the lines leading in and out of the head-end station using cable terminals. When mounting the module in a head-end station which is installed in a 19" cabinet, make sure the connections leading in and out for the 19" cabinet are made using cable terminals.

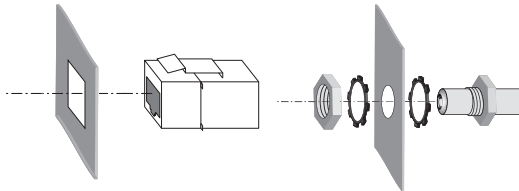








Tighten the nuts on the cable terminals until the teeth on the lock washer have penetrated the exterior coating and a good connection is made between the housing and cable terminals.

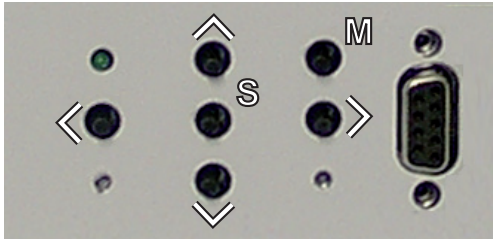

## 4 THE CONTROL PANEL AT A GLANCE


### 4.1 FUNCTIONS OF THE CONTROL PANEL BUTTONS



-   To move the cursor
-   To adjust values and functions
-  To save the programmed data
-  To switch to the next menu

### 4.2 MENU ITEMS

Program the Encoder module using the buttons on the head-end station control panel. The menus appear on the two-line display of the control panel. The parameters and functions to be set are underlined.


With the  button select the channel strip / other modules.




You can use the  button to select the following menu items:


- LAN settings:
  - Hardware IP address
  - IP mask (sub net mask)
  - IP gateway
  - UDP-Port
- LAN output settings
  - MPTS/SPTS
  - Output IP address(es)
  - MAC address of destination device (only at unicast connection)
  - Transmission protocol / Port number
  - Quantity of data packets / Forward error correction / Transmission channel
  - Transport stream and ORGNET-ID
- Input settings
  - Bitrate
  - Standard
  - Aspect ratio
  - Sharpness
  - Audio data rate
  - Volume
  - Station number
  - Station name
- Factory reset
- Save data

# 5 PROGRAMMING

## 5.1 PROGRAMMING PROCEDURE

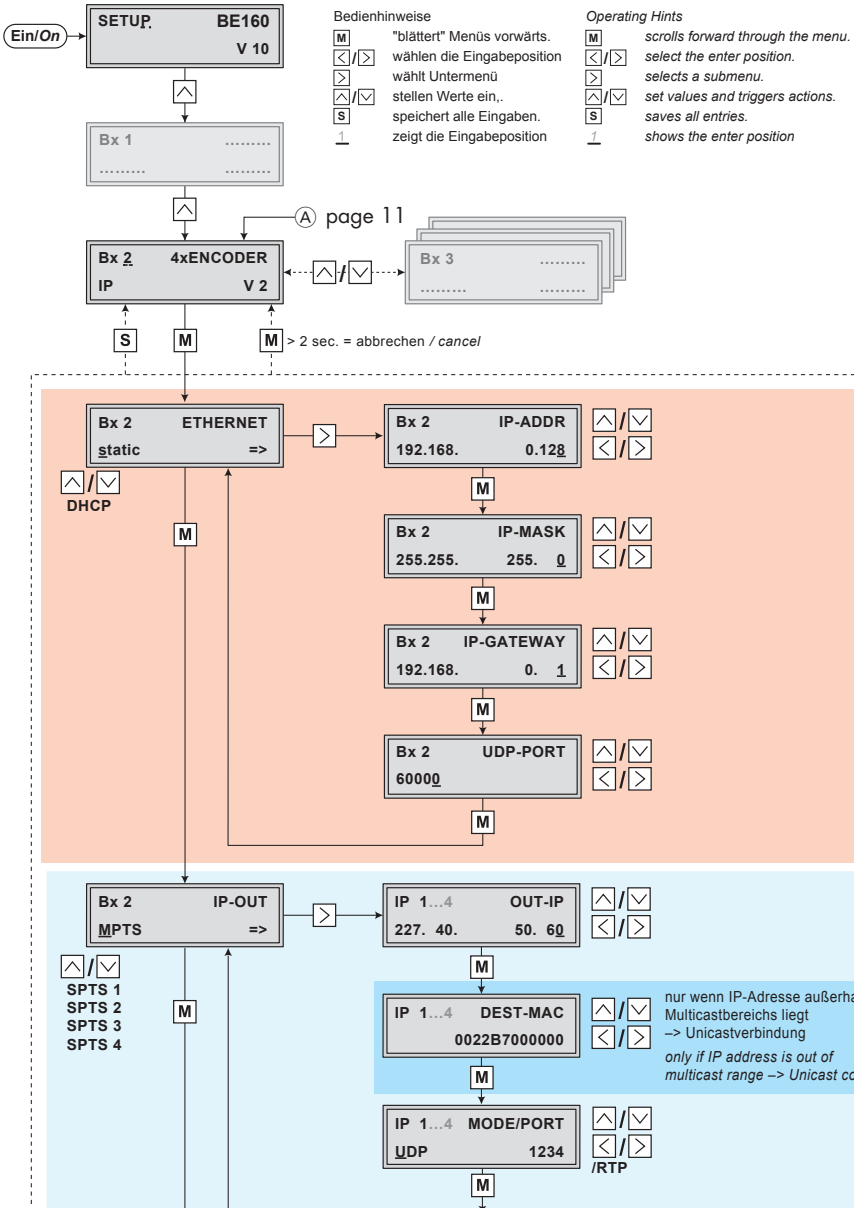

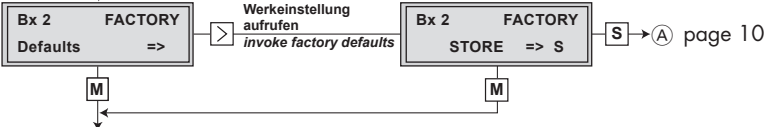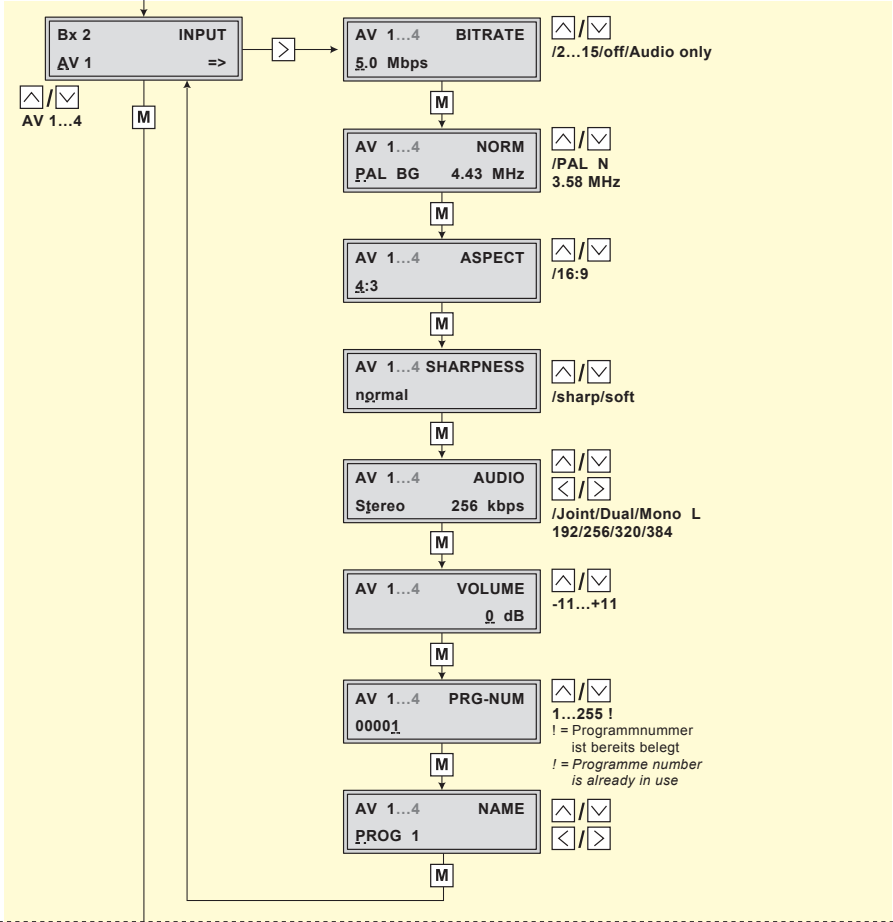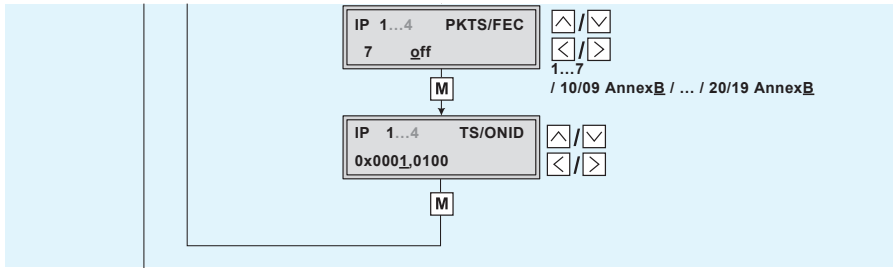

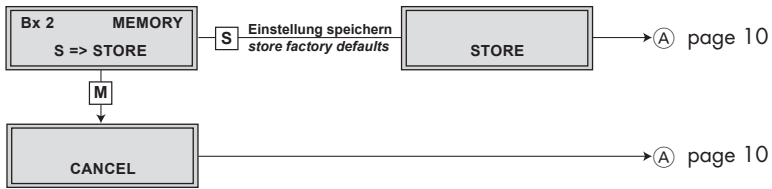

## 5.2 PROGRAMMING THE MODULE

### Notes:

- Entries are saved by pressing the **[S]** button.

—> You will be returned to "Selecting the module/channel strip".

- The programming process can be cancelled by pressing and holding the **[M]** button.


—> Changes will NOT be saved.

—> You will be returned to "Selecting the module/channel strip".



- Switch on the head-end station.


—> The display shows "SETUP BE160" and the software version of the head-end station (e.g. V 10).

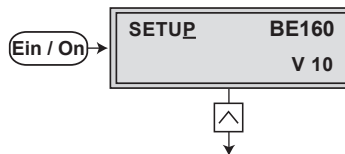—> The output level of the output collector can be adjusted in the "SETUP" menu (see STC 160 assembly instructions).



## SELECTING THE MODULE / CHANNEL STRIP

- If necessary, press   repeatedly to select the particular module (**Bx ...**) to be programmed.

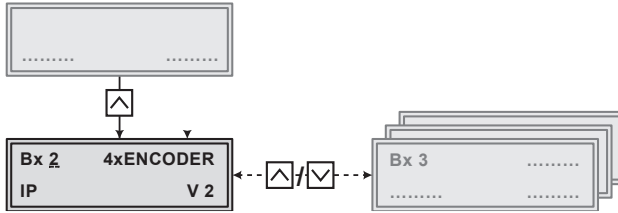

→ The display shows e.g. the menu **Bx 2 4xENCODER IP V 2**.

"**Bx 2**" stands for slot 2  
"**4xENCODER IP**" type of module  
"**V 2**" software version of the module

- Press the  button.


→ The "Ethernet settings" – "**ETHERNET**" main menu is activated.

## ETHERNET PARAMETERS



In this menu you specify whether the Ethernet parameters for the prospectively intended control of the cassette are entered ...


- automatically by a connected server ("**DHCP**") or
- manually via the menu ("**static**").

To assign the cassette uniquely, each IPTV cassette must be allocated its own IP address.

→ If no Ethernet settings should be done, press button .  
The "IP output signal" – "**OUTPUT**" main menu is activated (page 16).



- Press the   buttons to select ...
  - manual setting ("**static**") or
  - automatic setting ("**DHCP**") of the Ethernet parameter.






- Press the  button to activate the setting options.

→ The "IP address of the cassette" – "**IP-ADDR**" submenu is activated.

## IP ADDRESS OF THE CASSETTE

If you choose to enter the Ethernet parameters manually, set the IP address of the cassette in this menu. If "**DHCP**" is selected, the "**IP-ADDR**", "**IP-MASK**" and "**IP-GATEWAY**" sub-menus display the parameters that were assigned automatically by a connected server. If a server is not connected, " 0. 0. 0. 0\*" appears in the corresponding menu. The star " \* " in the display means that the data is provided by a DHCP server.

Bx 2	IP-ADDR
192.168.	0.12 <u>8</u>






- Use the   buttons to select the digits of the IP address displayed to be set and use   to set the desired IP address.
- Press the  button.

→ The "Address range (subnet mask)" – "**IP-MASK**" submenu is activated.

## ADDRESS RANGE (SUBNET MASK)

In this menu you define the address range for the cassettes connected to the LAN network.

Bx 2	IP-MASK
255.255.	255. <u>0</u>






- Use the   buttons to select the digit of the subnet mask displayed to be set and use   to set the desired subnet mask.
- Press the  button.

→ The "Address of the gateway" – "**IP-GATEWAY**" submenu is activated

## ADDRESS OF THE GATEWAY

The address of a gateway (server) can be set in this menu. If no gateway is used you can skip this setting.

Bx 2	IP-GATEWAY
192.168.	0. <u>1</u>






- Use the   buttons to select the digit of the IP address displayed to be set and use   to set the desired IP address.
- Press the  button.

—> The "UDP port" – "**UDP-PORT**" submenu is activated.

## UDP PORT

The UDP port setting is required if the cassette needs to be reached externally for remote maintenance.

Bx 2	UDP-PORT
6000 <u>0</u>	

- Use the   buttons to select the digit of the port number displayed to be set and use   to set the desired port number ("**0**" ... "**65535**").
- Press the  button.

—> Return to the main menu "Ethernet parameters"

- Press the  button.

—> The "IP Output" – "**OUTPUT IP**" main menu is activated.

## IP OUTPUT SIGNAL

 
Herein you select whether you would like to generate

- a MPTS data stream, which includes all input signals, or
- four SPTS data streams, each one input signal included.

In addition you get access to the submenus for IP output and TS/ONID(s) settings .

—> If no IP output settings should be done, press button **M**.

The "Input parameter" – "**INPUT**" main menu is activated (page 20).



- Using the   buttons select the desired kind of data stream (MPTS or SPTS 1...4).

—> If "MPTS" is selected the IP output settings must only be passed one time because all input signals are included in one data stream.

If "SPTS" is selected the IP output settings must be passed four times (SPTS 1 ... SPTS 4), because for each input signal a separate data stream will be generated.

- Press button .

—> The "Output IP address" – "**OUT-IP**" submenu is activated.



## OUTPUT IP ADDRESS

In this menu you set the output IP address for the selected transport stream.

IP 1...4	OUT-IP
227. 40.	50. 60

- "IPTV" IP addresses, which are used to send and receive the IPTV channels (e.g. 227.40.50.60) must be within the "multicast" range from 224.5.0.0 to 231.255.255.255.
- For special uses "Unicast" transmission is needed. Therefore the IP address must be outside of the multicast range. Then, however, the MAC address of the receiver is needed. If an IP address outside of the multicast range is set, below the menu for entering the MAC address of the receiver is displayed.

- Press the   buttons to select the digit of the IP address to be set.
- Using the   buttons set the desired IP address.
- Press the  button.

If the IP address is within the multicast range:

- The "Transmission protocol / Port number" – "MODE / PORT" submenu is activated (page 18).

If the IP address is out of the multicast range:

- The "Destination MAC address" – "DEST-MAC" submenu is activated.

## DESTINATION MAC ADDRESS

- This menu is enabled only if an IP address previously was set outside of the multicast range.

Herein you can enter the "Destination MAC address" for "Unicast" transmission (point to point).

IP 1...4	DEST-MAC
	0022B7000000

- Using the   buttons select the digit of the MAC address displayed to be set.
- Using the   buttons set the desired MAC address.
- Press the  button.

→ The "Transmission protocol / Port number" – "**MODE / PORT**" sub-menu is activated.

## TRANSMISSION PROTOCOL / PORT NUMBER

In this menu you can define the transmission protocol and the port number.

IP 1...4	MODE/PORT
UDP	1234

### Selecting the transmission protocol

- Press the  button to select "**UDP**".
- Using the   buttons to select the desired transmission protocol:

→ "**UDP**" – The "User Datagram Protocol" is for the connectionless (without handshake) transmission of data to a certain application. The port number of the service is also sent which the data should obtain.

→ "**RTP**" – The "Real-time Transport Protocol" is for continuously transmitting multimedia data streams in an IP network. Unlike UDP, the header is transmitted which makes the data transmission more robust.

### Setting the port number

- Using the   buttons select the digit of the port number displayed to be set.
- Using the   buttons set the desired port number.
- Press the  button.

→ The "Quantity of data packets, Forward error correction, Transmission channel" – "**PKTS / FEC**" submenu is activated.

In this menu you set the quantity of the data packets to be transmitted, the forward error correction FEC and the transmission channel. If the forward error correction is used the data to be transmitted is encoded in a redundant way so that the addressee can correct transmission errors.

IP 1...4	PKTS/FEC
7	<u>off</u>

#### Defining the quantity of data packets

- Press the  button to select the data packet digit.
- Using the   buttons define the quantity of MPEG data packets in one IP data packet ("1" ... "7").

#### Setting the forward error correction

- Press the  button to select the forward error correction.

→ In position "**off**" the forward error correction (FEC) is switched off.

- Using the   buttons set the desired value of the FEC ("**off**", "**10/9**" ... "**20/19**").

#### Setting the transmission channel

- Press the  button to select "**Annex...**".
- Use the   buttons to set the desired transmission channel ("**AnnexA**" / "**AnnexB**").
- Press the  button.

→ The "Transport stream ID and ORGNET ID" – "**TS/ONID**" submenu is activated.

## TRANSPORT STREAM ID AND ORGNET ID

If the input signals are encoded to a separate transport stream (e.g. setting of the output signal path -> ASI without any ASI input signal), a new ORGNET-ID must be assigned to the transport stream.

IP 1...4	TS/ONID
0x000 <u>1</u> ,0100	

- Use the   buttons to select the digit of the hexadecimal number to be set and use the   buttons to set the desired character.
- Press the  button.

→ Return to the main menu "IP output signal"  
→ If necessary perform the IP output settings for additional SPTS data streams.  
→ **When you exit the menu, note that the desired kind of data stream – MPTS or SPTS 1... SPTS 4 – is be set!**

- Press the  button.

→ The "Input parameter" – "INPUT" main menu is activated.

## INPUT PARAMETER

In this menu you select the input, you would like to set the input parameters in the submenus (AV 1 ... AV 4).

Bx 2	INPUT
AV 1	=>

 
→ If you do not want to do input settings, press the  button. The "Transport stream ID and ORGNET ID" – "TS/ONID" main menu is activated (page 20).




- Using the   buttons select the corresponding input.
- Press the  button.

—> The "Data rate of the video signal " – "**BITRATE**" submenu is activated.

## DATA RATE OF THE VIDEO SIGNAL

You can use this menu to set the data rate at which the video signal is to be encoded. The higher the data rate, the higher the quality of the transmitted video signal.







- Use the   buttons to set the data rate of the video signal ("2.0" ... "15.0" Mbit/sec). If only audio signals are to be encoded, set the data rate to "**Audio only**". In setting "**Off**" the input is switched off.
- Press the  button.

—> The "TV standard" – "**NORM**" submenu is activated.

## TV STANDARD

 In this menu the TV standard of the input signal is to be set - "**PAL BG 4.43 MHz**" or "**PAL N 3.58 MHz**".




- Use the   buttons to set the desired TV standard.
- Press the  button.

—> The "Aspect ratio" – "**ASPECT**" submenu is activated.

## ASPECT RATIO

 In this menu the aspect ratio of the encoded signal is to be set - "**16:9**" or "**4:3**".



- Use the   buttons to set the desired aspect ratio.
- Press the  button.

→ The "Sharpness" – "**SHARPNESS**" submenu is activated.

## SHARPNESS

In this menu the you set the desired sharpness - "**normal**", "**sharp**" or "**soft**".

 


- Use the   buttons to set the desired sharpness.
- Press the  button.

→ The "Audio signal type and bit rate" – "**Audio**" submenu is activated.

## AUDIO SIGNAL TYPE AND BIT RATE

In this menu you set the signal type and the bit rate the audio signal is to be encoded.



- Use the   buttons to set the signal type – "**Stereo**", "**Joint Stereo**" (subjectively improved stereo impression), "**Dual Channel**" (dual channel sound) or "**Mono L**" (left) - of the audio signal.
- Use the  button to select the bit rate setting and set it as desired with the   buttons ("**192**" ... "**384**" kbit/sec).


The higher the bit rate, the higher the quality of the transmitted audio signal. Bear in mind that when the bit rate is increased, the bandwidth of the output signal is also increased.

- Press the **M** button.

→ The "Level of the audio signal" –"**VOLUME**" submenu is activated.

#### LEVEL OF THE AUDIO SIGNAL

 In this menu you can adapt the volume of this audio input.



- Use the **▲****▼** buttons to set the desired volume ("– 11dB" ... "+ 11dB").
- Press the **M** button.

→ The "Programme number" –"**PRG-NUM**" submenu is activated.

#### PROGRAMME NUMBER (SID - SERVICE ID)

In this menu you can set the Service ID of the input.



- Use the **▲****▼** buttons to set the desired Service ID ("1" ... "255").

→ A "!" behind the Service ID indicates that this ID is already in use by another input.

- Press the **M** button.

→ The "Channel name" – "**NAME**" submenu is activated.

## CHANNEL NAME

In this menu the channel name of the input can be set.

AV 1...4	NAME
PROG 1	

- Use the  $\leftarrow$   $\rightarrow$  buttons to select the digit of the channel name to be set and use  $\uparrow$   $\downarrow$  buttons to set the desired character (" ", "0...9", "A...Z", "Ä", "Ö", "Ü", "a...z", "ä", "ö", "ü", "+", "-", "/", ":" or "\*").
- Press the **M** button.

→ Return to the main menu "Input parameter"

- Use the  $\uparrow$   $\downarrow$  buttons to select the 2nd AV input and carry out its settings analogous to that of the 1st AV input,


or

- Press the **M** button.

→ The "Factory reset" – "FACTORY Defaults" main menu is activated.

## FACTORY RESET

In this menu you can reset all settings to the factory defaults.

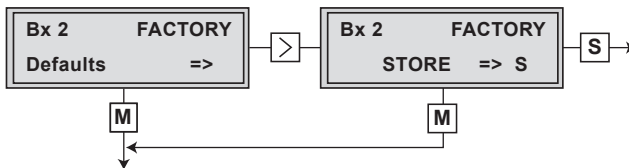

- Press the  $\rightarrow$  button.

→ The factory defaults are invoked ("FACTORY STORE").


→ By pressing the **M** button, you will be returned to the main menu "Selecting the module" (page 13).

- Press the **S** button.



- > The factory defaults are saved.  
The display shows "STORE"
- > Back to "Selecting the module" (page 13).

## SAVING SETTINGS

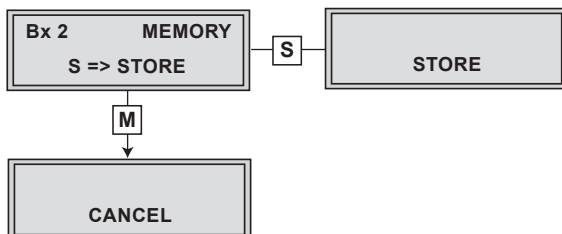

- All programmed data is saved by pressing the **S** button.

- > The settings are saved.
- > Return to "Selecting the module / channel strip" (page 13).
- > By pressing the **M** button, you will be returned to the menu item "Selecting the module / channel strip" **without** saving the programmed data.

## 6 FINAL PROCEDURES



**After installing the head-end station, upgrading accessories or installing modules it is necessary to tighten all cable connections, cable terminals and cover screws in order to maintain compliance with current EMC regulations securely.**

- Mount the base plate and the front cover (see STC 160 assembly instructions).

# Declaration of CE conformity



Konformitätserklärung  
Declaration of Conformity  
006/ 13



Der Hersteller/Importeur **GSS Grundig SAT Systems GmbH**  
The manufacturer/importer

Anschrift / Address / Adresse **Beuthener Straße 43, D-90471 Nürnberg, Germany**

erklärt hiermit eigenverantwortlich, daß das Produkt:  
declare under their sole responsibility that the product:

Bezeichnung / Name / Description **4x Digital MPEG2 Encoder to IP**

Type / Model / Type **GSS HDE 166**

Bestell-Nr. / Order-No. **GAK 9800**

folgenden Normen entspricht:  
is in accordance with the following specifications:

<b>EN 50083-2:</b>	<b>2012</b>	<b>EN 60950:</b>	<b>2006</b>
<b>EN ETSI EN 300386 :</b>	<b>2010</b>	<b>EN 60950-1 +A11 :</b>	<b>2009</b>
<b>EN 50581 :</b>	<b>2012</b>	<b>EN 60950-1 +A1 :</b>	<b>2010</b>

Das Produkt erfüllt somit die Forderungen folgender EG-Richtlinien:  
Therefore the product fulfils the demands of the following EC-Directives:

- |                    |   |
|--------------------|---|
| <b>2006/95/EG</b>  | <b>Richtlinie betreffend elektrische Betriebsmittel zur Verwendung innerhalb bestimmter Spannungsgrenzen</b><br><b>Directive relating to electrical equipment designed for use within certain voltage limits</b>                                |
| <b>2004/108/EG</b> | <b>Richtlinie über die elektromagnetische Verträglichkeit</b><br><b>Directive relating to electromagnetic compatibility</b>   |
| <b>2011/65/EG</b>  | <b>Richtlinie zur Beschränkung der Verwendung bestimmter gefährlicher Stoffe in Elektro- und Elektronik Altgeräten</b><br><b>Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment</b> |

Nürnberg, 12. Juni 2013

  
Michael Bierschneider  
Leiter Entwicklung  
Manager Development / Directeur Développement

## Service:

Phone: +49 (0) 911 / 703 2221 • Fax: +49 (0) 911 / 703 2326 • Email: [service@gss.de](mailto:service@gss.de)  
Grundig SAT Systems GmbH • Beuthener Straße 43 • D-90471 Nürnberg

