

Assembly Instructions

English



Grundig SAT Systems

Head-End HDTV Converter to IP DVB-S2 to SPTS

HDTV 1000 SPTS



GSS
Grundig SAT Systems GmbH
Beuthener Strasse 43
D-90471 Nuremberg

Phone: +49 (0) 911 / 703 8877
Fax: +49 (0) 911 / 703 9210
E-mail: info@gss.de
Internet: <http://www.gss.de>

Contents

1	Safety regulations and notes	4
2	General information	5
2.1	Packing contents	5
2.2	Meaning of the symbols used	5
2.3	Technical data	5
2.4	Description	6
2.5	Software query	7
3	Assembly	8
3.1	Installing the cassette	8
3.2	EMC regulations	8
3.3	Cassette overview	9
3.4	Connecting the cassette	10
3.5	Retrofitting a CA module	10
4	The control panel at a glance	11
4.1	Menu items	11
4.2	Control panel	11
5	Programming	12
5.1	Programming procedure	12
5.1.1	Channel strips "A" (without CA module) and "B"	12
5.1.2	Channel strip "A" with CA module	14
5.2	Programming the cassette	15
	Selecting the cassette, displaying the software version	15
	Setting the Ethernet parameters	16
	Setting the IP address of the cassette	16
	Setting the address range	17
	Setting the address of the gateway	18
	Setting the UDP port	18
	Selecting the input data stream	19
	Setting the LNB oscillator frequency	19
	Setting the input symbol rate	20
	Setting the DVB mode	20
	Setting the input frequency	21
	Testing the signal to noise ratio	22
	Allocating the IP addresses	23
	Switching the IP address off or on	24
	Selecting the transmission protocol	24
	Setting the port number	24
	Copying the settings to all IP addresses	25
	Defining the quantity of data packets	25
	Setting the forward error correction	25
	Setting the transmission channel	25
	Copying the settings to all IP addresses	26
	Setting IP addresses for services	27

Allocating IP addresses to services manually	27
Allocating IP addresses to services automatically	27
Allocating services manually	28
Selecting the sound options of the service	29
Switching DVB service information on or off.....	30
Copying the settings to all IP addresses	30
Displaying the output data rate.....	31
Saving settings	31
5.2.1 Operation with a CA module.....	31
Setting the operating voltage for the CA module	31
Setting the PID monitoring	32
Configuring the CA module	33
Decoding services	34
6 Final procedures.....	35

1 Safety regulations and notes



- Assembly, installation and servicing should be carried out by authorised electricians.
- Switch off the operating voltage of the system before beginning with assembly or service work or pull out the mains plug.
- Do not perform installation and service work during thunderstorms.
- Install the system so it will not be able to vibrate...
 - in a dust-free, dry environment
 - in such a manner that it is protected from moisture, fumes, splashing water and dampness
 - somewhere protected from direct sunlight
 - not within the immediate vicinity of heat sources
 - in an ambient temperature of -20 °C to +50 °C.
- Ensure that the head-end station is adequately ventilated. Do not cover the ventilation slots.
- Beware of short circuits
- No liability is accepted for any damage caused by faulty connections or inappropriate handling.
- Observe the relevant standards, regulations and guidelines on the installation and operation of antenna systems.
- Earth the SAT receiver in accordance with DIN EN 50083-1 / 60728-11 and VDE 0855 (earthing, equipotential bonding rail).
- **Test the software versions of the head-end station and the cassette and update them if necessary. The current software versions can be found at "www.gss.de".**
- **For further information please read the assembly instructions for the head-end station used.**



Take action to prevent static discharge when working on the device.



Electronic devices should never be disposed of in the household rubbish. In accordance with directive 2002/96/EC of the European Parliament and the European Council from January 27, 2003 which addresses old electronic and electrical devices, such devices must be disposed of at a designated collection facility. At the end of its service life, please take your device to one of these public collection facilities for proper disposal.

2 General information

2.1 Packing contents

1 Cassette HDTV 1000 SPTS	2 HF cables
1 CD (assembly instructions)	1 Brief assembly instructions

2.2 Meaning of the symbols used



Important note



General note



Performing works

2.3 Technical data

The devices meet the following EU directives:
2006/95/EC, 2004/108/EC

The product fulfils the guidelines and standards for CE labelling.

HF input

Frequency range:	925 ... 2150 MHz
Level range:	60 dB μ V ... 80 dB μ V
Return loss:	> 8 dB
Impedance:	75 Ω
DVB-S modes:	QPSK $1/2, 2/3, 3/4, 5/6, 7/8$
DVB-S2 modes:	QPSK $1/2, 3/5, 2/3, 3/4, 4/5, 5/6, 8/9, 9/10$ 8PSK $3/5, 2/3, 3/4, 5/6, 8/9, 9/10$
Symbol rate DVB-S:	QPSK: 2 ... 45 MSymb/s
Symbol rate DVB-S2:	QPSK: 10 ... 30 MSymb/s 8PSK: 10 ... 31 MSymb/s

LAN interface

Standard:	100-BASE-T
Data rate:	\leq 80 MBit
Protocols:	UDP (User Data Protocol), RTP (Real-Time Transport Protocol)

ASI interfaces

Standard:	DIN EN 50083-9
Format:	MPEG ISO IEC 13818-1
User data rate:	2 ... 90 Mbit/s

Impedance: 75 Ω
 Level (input / output): 800 mV_{pp} ± 10%
 Return loss (input): > 17 dB (5 ... 270 MHz)


Connections

SAT inputs: 2 F sockets
 HF output: 1 IEC socket (no function)
 LAN: 1 RJ 45 socket
 ASI input: 1 BNC socket, 75 Ω
 ASI output: 1 BNC socket, 75 Ω
 Connection strip (10-pin): for supply voltages and control circuits
 RS 232 socket: serial interface for software update
 Conditional access: 1 (several channels can be decoded)

2.4 Description

The cassette is a DVB-S2 / SPTS converter which combines modulated services (programmes) in accordance with the DVB-S-/DVB-S2 standard and data streams supplied via the ASI interface into one data stream in the TPS module. This is emitted via the LAN interface and can contain up to 16 services. For operating the cassette in a LAN network it can be assigned its own IP address. The cassette is equipped with two tuners. The accompanying channel strips consist of the digital SAT tuners and the digital signal processing levels. The resulting data streams from the "Tuner A"/"Tuner B" channel strips and from the data streams supplied via the ASI socket (ASI – Asynchronous Serial Interface according to DIN EN 50083-9) can take up to 16 services and are each assigned an IP address. The signal supplied into the ASI input is provided again via the ASI output.

Principle signal path:

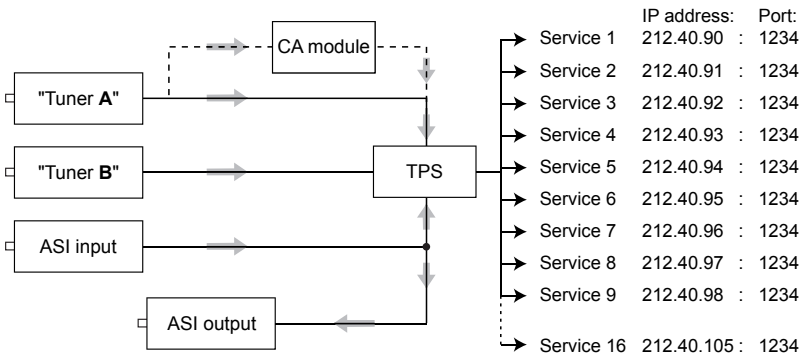

In the head-end station display, the channel strips of the cassette are indicated with "**Bx ...A**" ("**Tuner A**") or "**Bx ...B**" ("**Tuner B**"). The channel strip "**Tuner A**" can decode encoded channels via a corresponding CA module. The cassette is controlled with the head-end station control unit.

Two LEDs provide an indication of the signal quality with their colour. The quality of the received transport stream can also be shown in the display ("**C/N**" menu). In an additional menu, the transmission of DVB service information (EIT, TDT and SDT) or teletext (TXT) can be individually activated or deactivated.

DVB service information:

EIT (Event Information Table):

For each service, event information is transmitted (such as starting time, duration, encryption etc.)

TDT (Time Date Table):

The transmitted table contains the current time and date.

SDT (Service Description Table):

Information relating to the encryption is also sent with the name of each service.

The LEDs for the LAN interface show whether a network connection exists and whether a data transfer is in progress.

When the head-end station is switched on, the two-line LC display shows the software version of the control unit.

To operate this cassette the software version of the control unit must be "**V 40**" or higher. You can find the current operating software for the control unit and the cassette, the software "**BE-Flash**" and the current assembly instructions on the website "www.gss.de".

The cassette is designed for use in the following head-end stations:

- STC 1200 - STC 316
- STR 19-8 - PST 19-1

2.5 Software query

Control unit

If necessary, you can activate the indication of the software version of the control unit manually:

- Press any two keys on the control unit of the head-end station simultaneously until the display goes dark and the software version, e.g. "**V 40**" appears.

Cassette

After activating the cassette the software version of the cassette is displayed (s. page 15).


3 Assembly

3.1 Installing the cassette



- Ensure the head-end station is mounted so it will not be able to vibrate. Avoid, for example, mounting the head-end station onto a lift shaft or any other wall or floor construction that vibrates in a similar way.
- Before installing or changing a cassette unplug the power cable from the mains power socket.

- Remove the fastening screws ① of an unoccupied slot from the bracket of the head-end station.
- Insert the cassette in this slot and push it into the housing.
- Align the cassette and apply slight pressure to connect it to the connections of the board and the HF bus bar.
- Fasten the cassette with the screws ①.

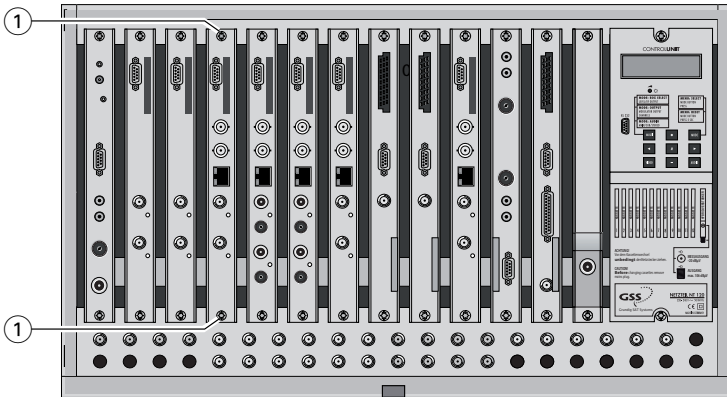


3.2 EMC regulations



To comply with the current EMC regulations, it is necessary to connect the lines leading in and out of the head-end station using cable terminals. When mounting the cassette in a head-end station which is installed in a 19" cabinet, make sure the connections leading in and out for the 19" cabinet are made using cable terminals.



The attenuation of shielding of the connection lines must meet the requirements for "Class A".

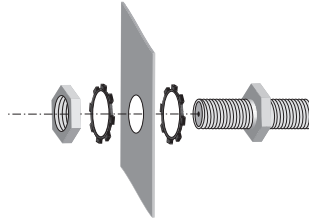


- Insert the required number of cable terminals in the openings provided in the head-end station or in the 19" cabinet.
—> Cable terminals are not included in the scope of delivery.



Tighten the nuts on the cable terminals until the teeth on the lock washer have penetrated the exterior coating and a good connection is made between the housing and cable terminals.

3.3 Cassette overview

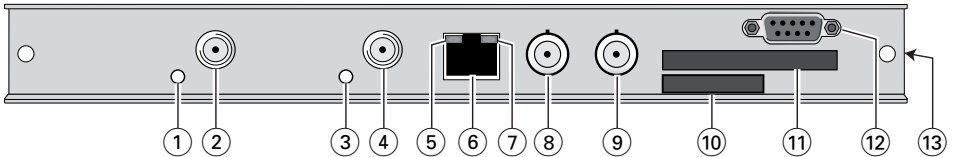

- ① Status LED of channel strip "Tuner B"
- ② SAT IF input of channel strip "Tuner B"
- ③ Status LED of channel strip "Tuner A"
- ④ SAT IF input of channel strip "Tuner A"
- ⑤ Status LED of the LAN interface (yellow LED – data transfer)
- ⑥ LAN socket
- ⑦ Status LED of the LAN interface (green LED – network connection)
- ⑧ ASI input
- ⑨ ASI output
- ⑩ Type label
- ⑪ Slot for a CA module
- ⑫ D-SUB socket "RS 232"

The operating software of the cassette can be updated via the 9-pin D-SUB socket "RS 232" using a PC or notebook and the software "BE-Flash".

You can find the current operating software on the website "www.gss.de".

- ⑬ MAC address

3.4 Connecting the cassette


- Connect the SAT IF connections to the SAT IF input sockets ④ (channel strip "Tuner A") and ② (channel strip "Tuner B") (figure in chapter 3.3).
- Connect the LAN socket ⑥.
- Connect the ASI input ⑧ and the ASI output ⑨ to the peripheral ASI devices.

3.5 Retrofitting a CA module

The cassette is equipped with a common interface. It allows you to connect a CA module for various encryption systems and service providers. Encoded services (channels) can only be decoded with a CA module suitable for the encoding system and the corresponding smart card. The smart card contains all the information for authorisation, decoding and subscription.



- Check with the distributor or manufacturer of the CA module to be used to ensure that it is suitable for decoding several services.
 - **The hardware and software of this cassette have been thoroughly prepared and tested. Any changes made by service providers in the data structures might impair or even prevent this function.**
 - When working with the CA module, please read the corresponding operating manual from the respective provider.
- Insert the smart card ① into the CA module ② so that the chip ③ on the smart card faces the thicker side (top) of the CA module.
 - Insert the CA module into the guide rails of the CA slot ④ with the top side of the CA module facing the top side of the cassette.
 - Push the CA module without canting into the guide rails of the CA slot ④ and contact it to the common interface.

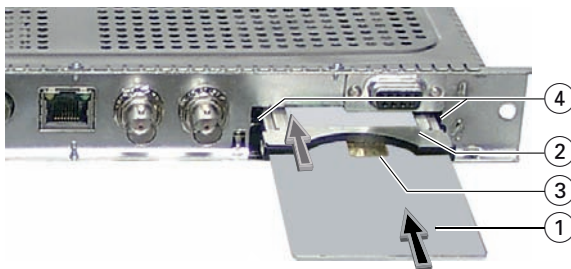

4 The control panel at a glance


4.1 Menu items

Program the cassette using the buttons on the control unit of the head-end station. The two-line display of the control unit then shows the menus.

The parameters and functions to be set are underlined.

Use the **MODE** key to select the following main menu items:

- Setting Ethernet parameters
- Selecting the input
- Allocating the IP addresses
- Displaying the data rate

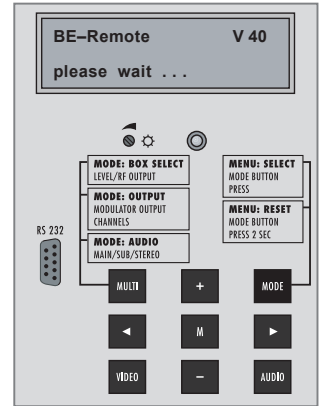

4.2 Control panel

The key pad on the head-end station is used to scroll through the menus and menu items one at a time:

MODE scrolls forward through the menus.


← / → select parameters in the menus.

+ / - set values, initiate actions.

MULTI selects sub-menus.

AUDIO scrolls backward through the menus.


M saves all entries.

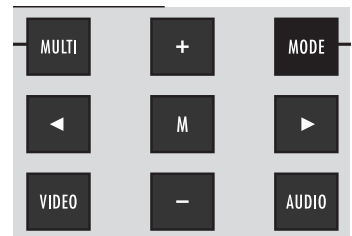



5 Programming

5.1 Programming procedure


5.1.1 Channel strips "A" (without CA module) and "B"

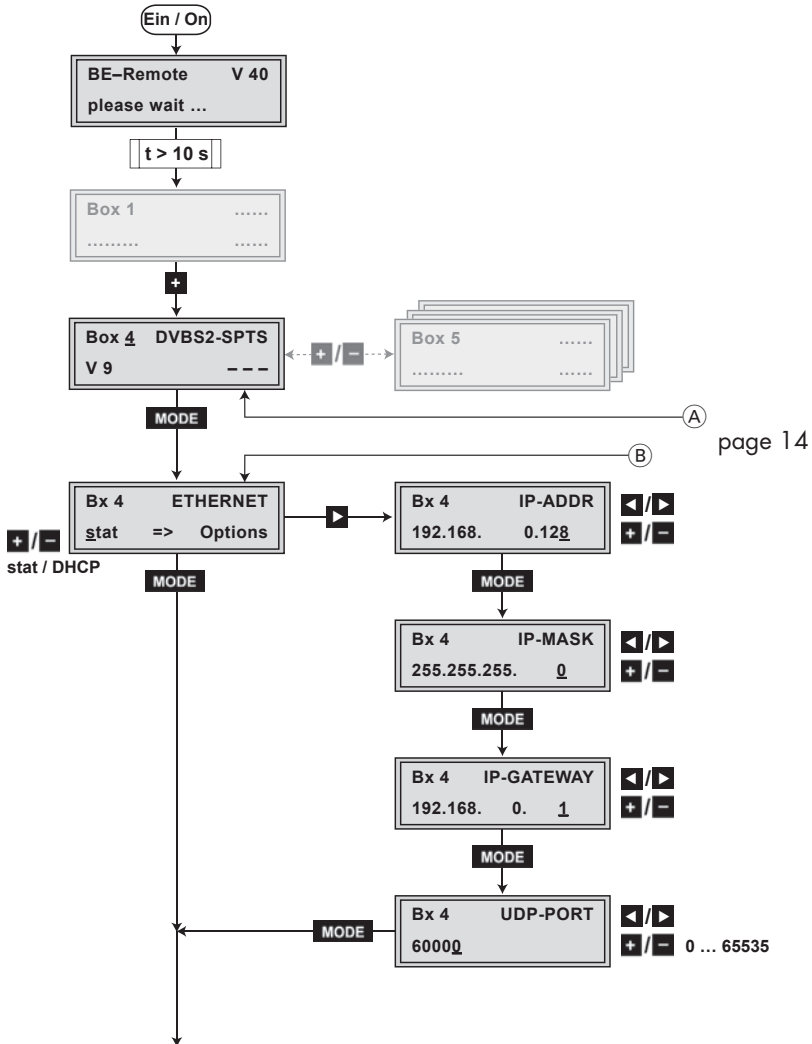

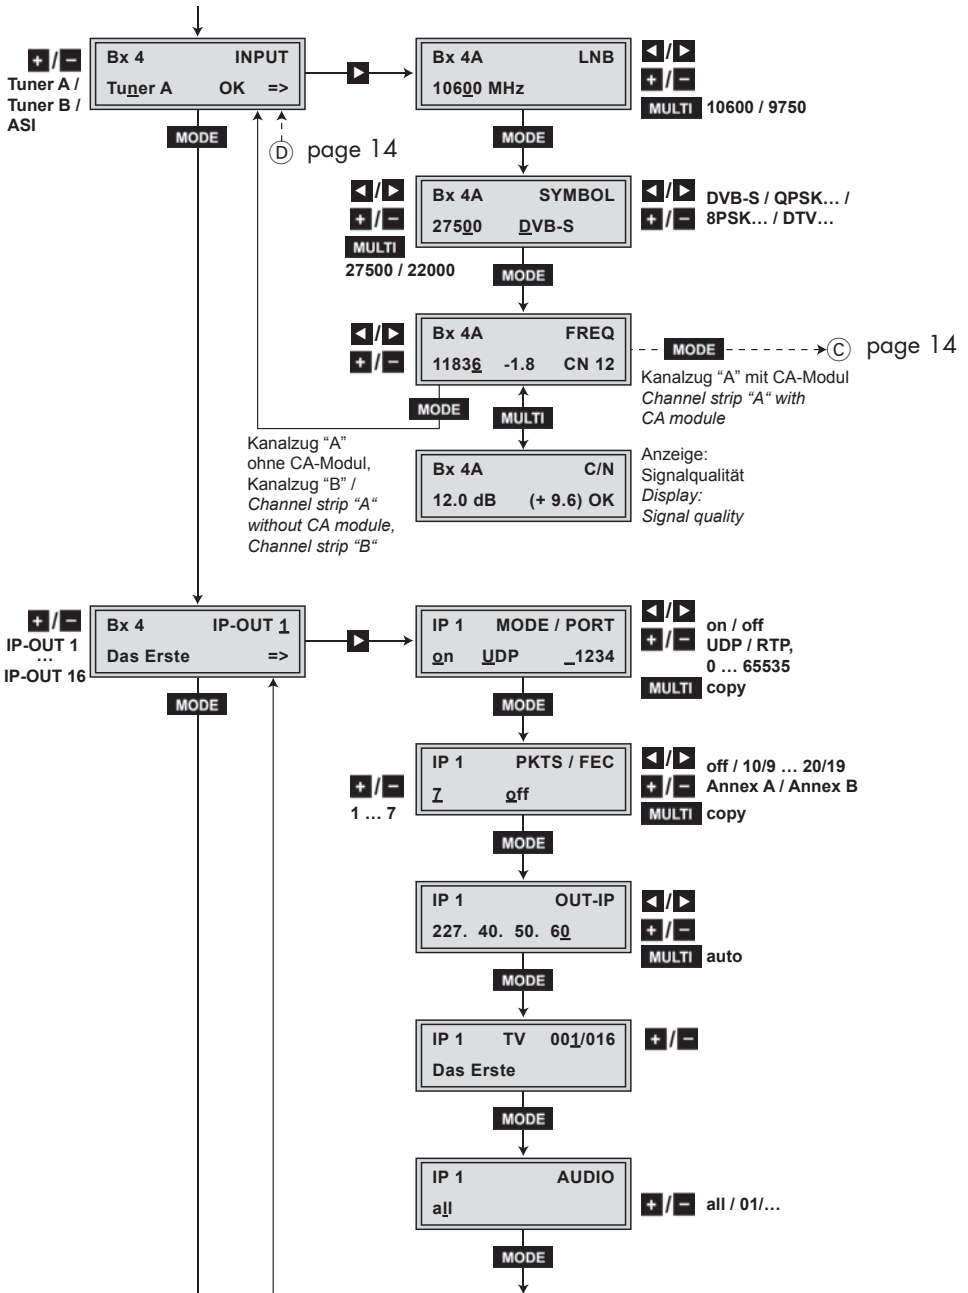

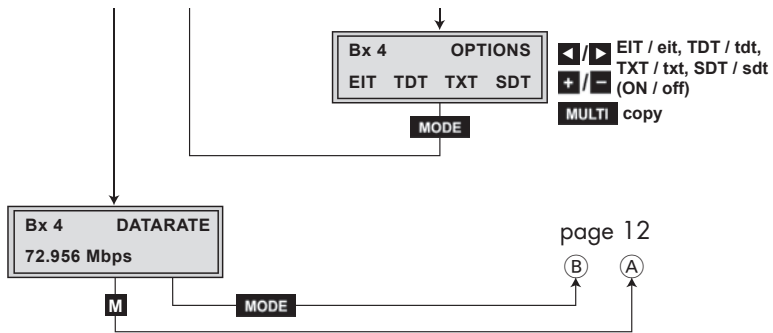


5.1.2 Channel strip "A" with CA module

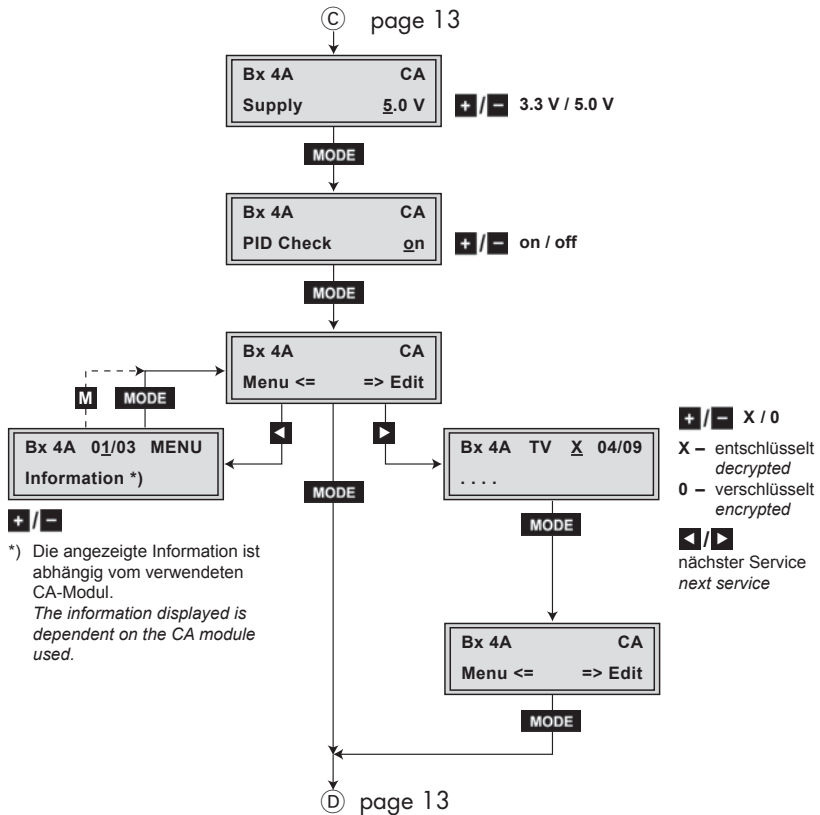


5.2 Programming the cassette

- > Pressing the **MODE** button for longer than 2 seconds cancels the programming procedure. This takes you back to the program item “Selecting the cassette” from any menu. Any entries that have not been saved are reset to the previous settings.
- > Entries in the menus can be saved by pressing the **M** key. You are taken back to the “Selecting the cassette” menu item.
- > Using the **AUDIO** button previous menus can be activated.
 - Switch on the head-end station
 - > The display shows the software version (e.g. V 40)
 - > The processor reads the cassettes’ data (approx. 10 seconds).

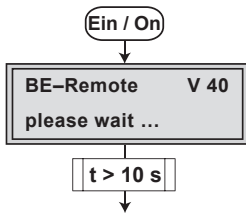

Selecting the cassette, displaying the software version

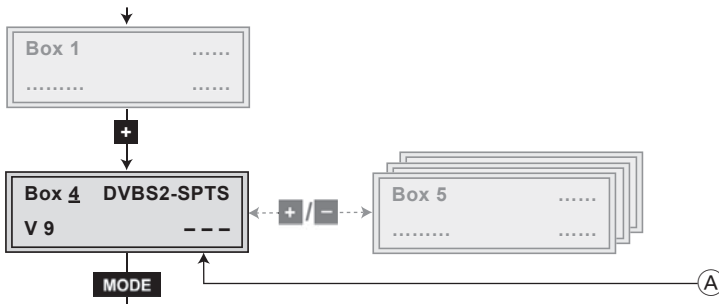


- Select the cassette you want to program (e.g. **Box 4**) by repeatedly pressing the button **+/-** if necessary.
 - > The display shows e.g. the menu “**Box 4 DVBS2-SPTS**”:
 “**Box 4**” stands for slot 4
 “**DVBS2-SPTS**” type of cassette
 “**V 9**” software version of the cassette

- Press the **MODE** button.
 → The “Setting the Ethernet parameters” – “**ETHERNET**” menu is activated.

Setting the Ethernet parameters


In this menu you specify whether the Ethernet parameters for the cassette are entered automatically by a connected server (“**DHCP**”), or whether you want to enter them manually (“**stat**”). To assign the cassette uniquely, each IPTV cassette must be allocated its own IP address.

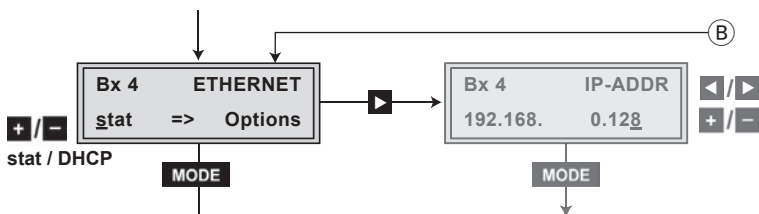

- Press the **+**/**-** buttons to select manual setting (“**stat**”) or automatic setting (“**DHCP**”) of the Ethernet parameters.
- Press the **▶** button to activate the setting options (“**Options**”).
 → The “Setting the IP address of the cassette” – menu “**IP-ADDR**” is activated.

Setting the IP address of the cassette


If you choose to enter the Ethernet parameters manually, set the IP address of the cassette in this menu. If “**DHCP**” is selected, the “**IP-ADDR**”, “**IP-MASK**” and “**IP-GATEWAY**” sub-menus display the parameters that were assigned automatically by a connected server. If a server is not connected, “ 0. 0. 0. 0* ” appears in the corresponding menu. The star “ * ” in the display means that the data is provided by a DHCP server.

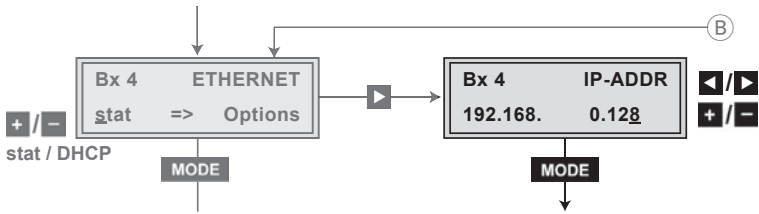

- Use the ◀/▶ buttons to place the cursor under the digit of the IP address displayed to be set and use + / - to set the IP address wished.
- Press the **MODE** button.
 - The “Setting the address range” – “**IP-MASK**” menu is activated.

Setting the address range


In this menu you define the address range for the cassettes connected to the LAN network.

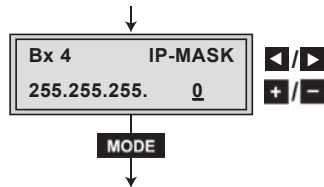

- Use the ◀/▶ buttons to place the cursor under the digit of the IP address displayed to be set and use + / - to set the IP address wished.
- Press the **MODE** button.
 - The “Setting the address of the gateway” – “**IP-GATEWAY**” menu is activated.

Setting the address of the gateway


The address of a gateway (server) can be set in this menu. If no gateway is used you can skip this setting.

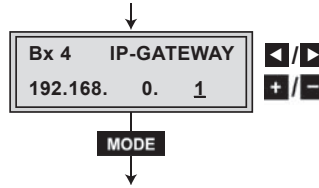

- Use the ◀/▶ buttons to place the cursor under the digit of the IP address displayed to be set and use +/- to set the IP address wished.
- Press the **MODE** button.
→ The "Setting the UDP port" – "UDP-PORT" menu is activated.

Setting the UDP port


The UDP port setting is required if the cassette needs to be reached externally to make the setting, such as from another input frequency. This setting is intended for future functions and can be skipped for this cassette.

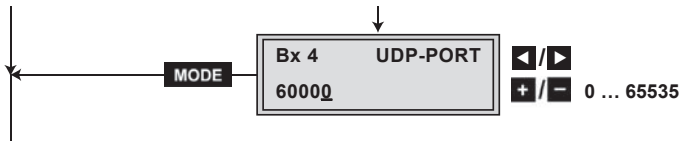

- Use the ◀/▶ buttons to place the cursor under the digit of the port number displayed to be set and use +/- to set the port number wished ("0" ... "65535").
- Press the **MODE** button.
→ The "Selecting the input data stream" – "INPUT" menu is activated.

Selecting the input data stream


In this menu you select the signal source for the selection of the services. The data streams to be processed are provided by "Tuner A", "Tuner B" and the ASI interface "ASI".

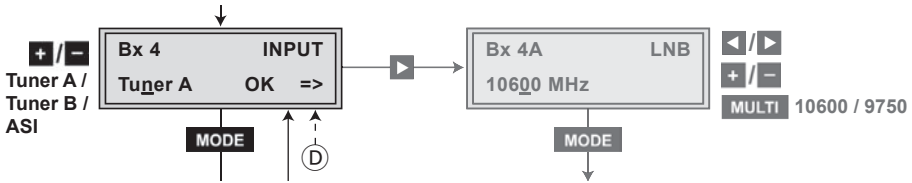

- Press the **+ / -** buttons to select the signal source of the input data stream ("Tuner A", "Tuner B", "ASI").
→ "OK" indicates that an input signal is available. If there is no input signal available "- -" is displayed instead of "OK".
- Press the **▶** button.
→ The "Setting the LNB oscillator frequency" – "LNB" menu is activated.

Setting the LNB oscillator frequency

Set the oscillator frequency of the LNB used in this menu.

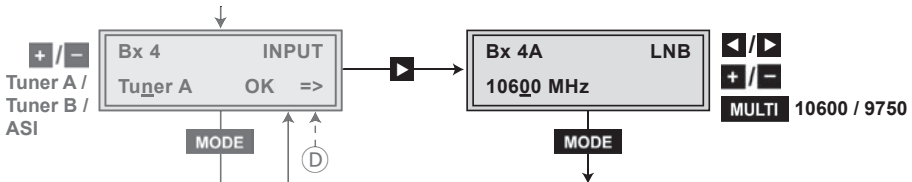

- Using the **MULTI** button the oscillator frequencies "10600" or "9750" can be selected directly.
- To set other oscillator frequencies use the **◀ / ▶** buttons to place the cursor under the digit of the oscillator frequency displayed to be set.
- Press **+ / -** to enter the respective digit of the oscillator frequency of the LNB used.
- Repeat the procedure by the quantity of the digits to be set.


- Press the **MODE** button.
 → The "Setting the input symbol rate, setting the DVB mode" – "**SYMBOL**" menu is activated.

Setting the input symbol rate

Setting the DVB mode

The symbol rates of the satellite transponders can be found in the current channel table of the satellite operator, in various satellite magazines and in the Internet.

The cassette recognizes the transmitted DVB mode and switches over between the normal QPSK mode (DVB-S) and the DVB-S2 mode. Receiving stations with DVB-S2 mode, we suggest to preset the DVB mode to shorten the time for searching stations.

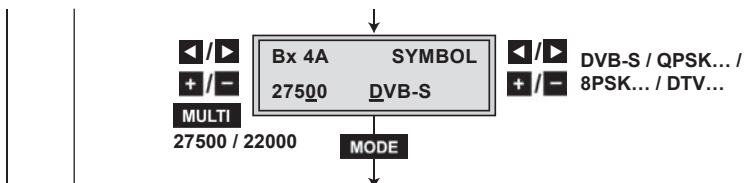

Setting the input symbol rate

- Using the **MULTI** button the symbol rates "27500" or "22000" can be selected directly.
- To set other symbol rates use the **◀/▶** buttons to position the cursor under the digit of the symbol rate displayed to be set.
- Press **+/-** to enter the respective digit of the symbol rate needed.
- Repeat the procedure by the quantity of the digits to be set.

Setting the DVB mode


- Use the **▶** button to place the cursor under "**DVB-S**" and set the required DVB-S2-mode with the **+/-** buttons.
- Press the **MODE** button.
 → The "Setting the input frequency" – "**FREQ**" menu is activated.

Setting the input frequency

If three dots "..." appear in the second line of the display, the cassette is in the "station search" mode. Please wait until the process has finished.

Once the HF receiver has synchronised to the input signal, any offset to the target frequency is displayed in MHz, e.g. "- 1.8".


If a question mark "?" appears in the second line of the display, there is no input signal present. Check the configuration of the antenna system and head-end station as well as the preceding settings of the cassette.

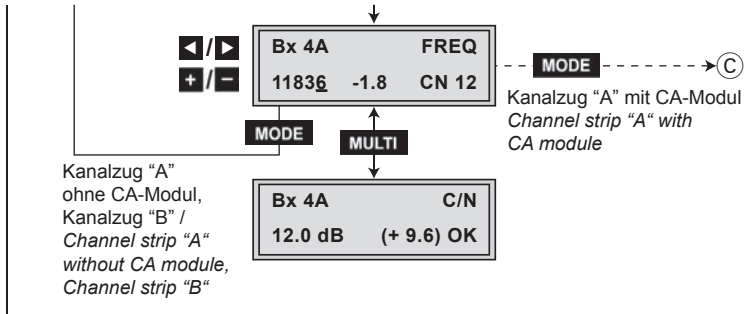

- Use the **◀/▶** buttons to position the cursor under the digit of the frequency displayed to be set.
- Press **+/-** to set the input frequency.
- Set the frequency offset shown in the display (e.g. "- 1.8") to less than 1 MHz by varying the input frequency using the **+/-** buttons.
 - The "CN 12" display indicates the signal to noise ratio of the signal received.
- Press the **MULTI** button.
 - The "Testing the signal to noise ratio" – "C/N" menu is activated.

Testing the signal to noise ratio

In this menu you can estimate the quality of the input signal.

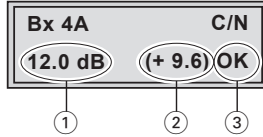


- ① Current signal to noise ratio
- ② This value shows the difference between the quality of the input signal and the threshold of the tuner at this type of modulation.
At a value lower than "5" picture dropouts can occur.



- ③ If "OK" is shown, the signal to noise ratio is ok.
If a value < 5 is shown under ② the display changes from "OK" to "??". In this case test the input signal.

- > In addition to the indicator in the display, there is a status LED which indicates the quality of the received transport stream (level and C/N).
- > If the LED lights yellow the SAT IF input level and the signal to noise ratio must be tested.

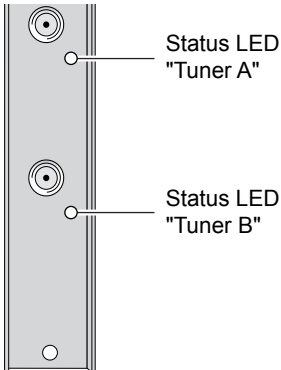

LED indicator	Indication
Green	Signal quality is good
Yellow	Signal quality is insufficient
Red	No signal


- Press the **MULTI** button to return to the main menu.

- Press the **MODE** button.
 - The “Selecting the input data stream” – “**INPUT**” menu is activated when the input signal source “**Tuner A**” without a CA module installed and “**Tuner B**” are programmed (page 19).
 - Programming the input signal source “**Tuner A**” with a CA module installed the “Setting the operating voltage for the CA module” – “**CA Supply**” menu is activated (page 31).
- Use the **+ / -** buttons to select further input signal sources (“**Tuner B**” / “**ASI**”) and program them.
- Press the **MODE** button.
 - The “Allocating the IP addresses” – “**IP-OUT 1**” menu is activated.

Allocating the IP addresses

In this menu up to 16 services that are contained in the data streams of the input source signals (“**Tuner A**”, “**Tuner B**”, “**ASI**”) can be accessed. The services detected receive an IP address automatically.


In the following sub-menus you can set specific parameters for each service.

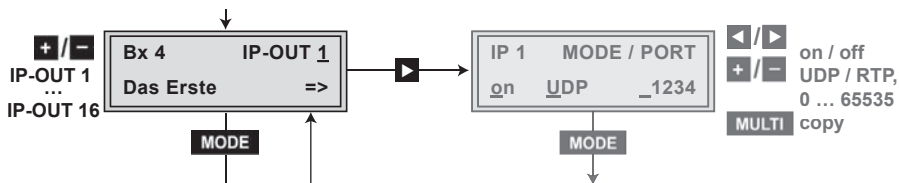

- Press the **+ / -** buttons to select the IP outputs to be set (“**IP-OUT 1**” ... “**IP-OUT 16**”).
 - In the second line of the display the service is indicated allocated to the IP output (e.g. “**Das Erste**”).
- Press the **▶** button.
 - The “Switching the IP address off or on, selecting the transmission protocol, setting the port number” – “**MODE / PORT**” menu is activated.


Switching the IP address off or on
Selecting the transmission protocol
Setting the port number

In this menu you can switch off the IP address displayed, and define the transmission protocol and the port number.

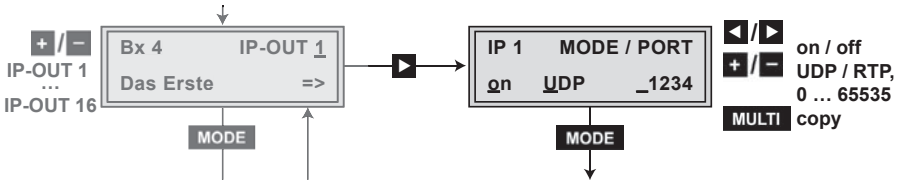

Switching the IP address off or on

- Press the **+**/**-** buttons to switch off ("off") or ("on") the IP address and the service referred.
 → In the second line of the "IP-OUT ..." menu "off" is displayed instead of the service referred.

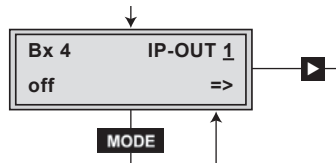

Selecting the transmission protocol

- Press the **▶** button to position the cursor under "UDP" or "RTP".
- Using the **+**/**-** buttons to select the transmission protocol wished:
 - "UDP" – The User Datagram Protocol is for the connectionless transmission of data to a certain application. The port number of the service is also sent which the data should obtain.
 - "RTP" – The Real-time Transport Protocol is for continuously transmitting multimedia data streams in an IP network. Unlike UDP, the header is transmitted which makes the data transmission more robust.

Setting the port number

- Press the **▶** button to position the cursor under the port number e.g. " 1234".
- Use the **◀/▶** buttons to position the cursor under the digit of the port number displayed to be set.
- Using the **+/-** buttons set the port number wished.

Copying the settings to all IP addresses


- Pressing the **MULTI** button the settings "transmission protocol" and "Port number" can be copied to all IP addresses.
→ The display shows "copy" for a short time.
- Press the **MODE** button.
→ The "Defining the quantity of data packets, setting the forward error correction, setting the transmission channel" – "PKTS / FEC" menu is activated.

Defining the quantity of data packets

Setting the forward error correction

Setting the transmission channel

In this menu you set the quantity of the data packets to be transmitted, the forward error correction FEC and the transmission channel. If the forward error correction is used the data to be transmitted is encoded in a redundant way so that the addressee can correct transmission errors.

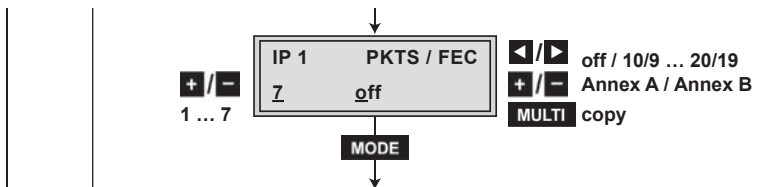


Defining the quantity of data packets

- Using the **+/-** buttons define the quantity of MPEG data packets in one IP data packet ("1" ... "7").



Setting the forward error correction

- Press the **▶** button to position the cursor under **"off"** .
—> In position **"off"** the forward error correction (FEC) is switched off.
- Using the **+/-** buttons set the value of the FEC wished (**"off, 10/9"** ... **"20/19"**).

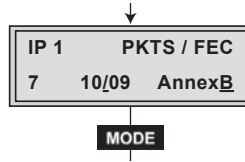

Setting the transmission channel

- Press the **▶** button to position the cursor under **"Annex..."**.
- Use the **+/-** buttons to set the transmission channel wished (**"AnnexA"** / **"AnnexB"**).


Copying the settings to all IP addresses




- Pressing the **MULTI** button the settings "Quantity of the data packets", Forward error correction" and "Transmission channel" can be copied to all IP addresses.
—> The display shows **"copy"** for a short time.
- Press the **MODE** button.
—> The "Setting IP addresses for services" – **"OUT-IP"** menu is activated.

Setting IP addresses for services

In this menu you set the IP address for the IP output selected. The software allows to allocate IP addresses to 16 services automatically in ascending order after setting the IP address.

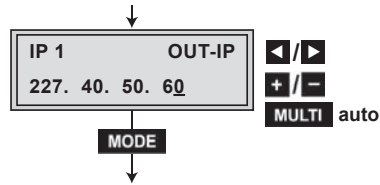

If an already available IP address is occupied, an exclamation mark "!" appears in the first line of the display beside the number of the IP output.



Allocating IP addresses to services manually

- Press the ◀/▶ buttons to position the cursor under the digit of the IP address to be set.
- Using the +/- buttons set the IP address wished.


Allocating IP addresses to services automatically

- Pressing the MULTI button the first 16 of the present services are occupied with IP addresses in ascending order, starting from the IP address set.
→ The display shows "auto" for a short time.
- Press the MODE button.
→ The "Allocating services manually" menu is activated.



Allocating services manually

In this menu all services (programmes) supplied via "Tuner A", "Tuner B" and "ASI" can be displayed and each service is assigned a set IP address in the "OUT-IP" menu. The service can be accessed in the connected network using the given IP addresses for this output in the "OUT-IP" menu.

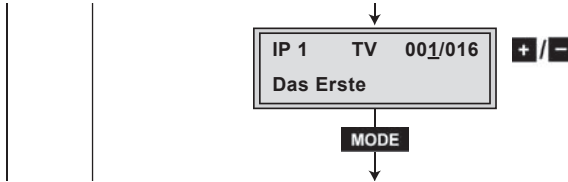

- Using the **+**/**-** buttons select the service wished.
→ The display shows e.g.: **IP 1 TV 001/016**
Das Erste

Meaning of the indicators in the example:

- "IP 1" – IP address with the consecutive number "1"
- "TV" – "Television" (type of service)
- "001/016" – The 1st of 16 services is being allocated to the IP address.
- "Das Erste" – Name of the service

Further possible terms displayed:

- "RA" "Radio" (type of the service)
For radio stations, the screen of the connected TV or test receiver is darkened.
- " * " The star means that the TV or radio station selected is encoded. To enable the stations, the CA module and the appropriate smart card of the station provider are required.

- If a service number (e.g. "131") appears instead of "TV" or "RA", this indicates that an unnamed station or an undefined data stream is being received.



If the service selected is already allocated to an IP address, in the first line of the display an exclamation mark "!" appears beside the type of the service.




If no service is found the display shows "—" instead of the name of the service. In this case check the configuration of the antenna system including the head-end station and the previous settings of the cassette as well as the components connected to the ASI input.

- Press the **MODE** button.
—> The "Selecting the sound options of the service" – "AUDIO" menu is activated.

Selecting the sound options of the service


If several sound options in different languages, Dual sound ("2ch") or AC3 are transmitted in a service, you can select the desired audio stream from the transport stream in this menu.

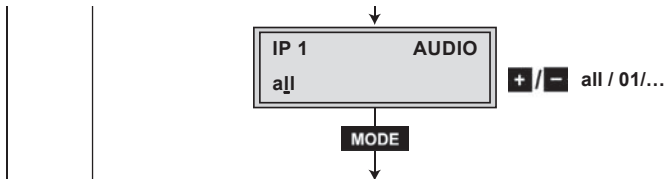

- Press **+ / -** to select the desired sound option (e.g. "all", "deu" – German, "2ch" etc.).
- Press the **MODE** button.
—> The "Switching DVB service information on or off" – "OPTIONS" menu is activated.

Switching DVB service information on or off

In this menu the transmission of the DVB service information (EIT – Event Information Table, TDT – Time Date Table, TXT – Teletext, SDT – Service Description Table) can be activated or deactivated.

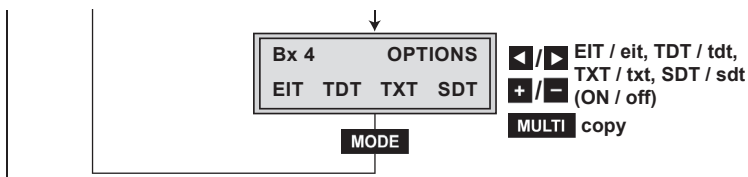

- Use the **◀/▶** buttons to position the cursor under the transmission option to be activated or deactivated.
- Using the **+/-** buttons activate ("EIT", "TDT", "TXT", "SDT") or deactivate ("eit", "tdt", "txt", "sdt") the transmission option wished.
 - Activated options are shown with capital letters, deactivated with small letters.


Copying the settings to all IP addresses



- Pressing the **MULTI** button the settings can be copied to all IP addresses.
 - The display shows "copy" for a short time.
- Press the **MODE** button.
 - The "Allocating the IP addresses" – "IP-OUT ..." menu is activated (page 23).
- Repeat the settings until all services wished are allocated to an IP address.
- Press the **MODE** button.
 - The "Displaying the output data rate" – "DATARATE" menu is activated.

Displaying the output data rate

In this menu the current data rate is displayed.

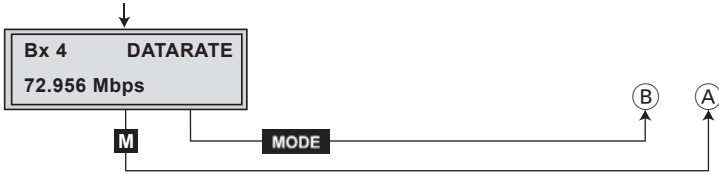

Saving settings


- Press the **M** button.
 - The settings are saved.
 - You will be returned to the menu item "Selecting the cassette" via connection **(A)** (page 15).
 - By pressing the **MODE** button, you will be returned to the menu item "Setting the Ethernet parameters" via **(B)** **without** saving the programmed data (page 16).

5.2.1 Operation with a CA module

In order for this function of the CA module to be possible, in the "Selecting the input data stream" – "INPUT" menu (page 19) an input signal source must be selected whose data stream contains services which can be decoded by the CA module you are using and your smart card. Where both encrypted and unencrypted services are transmitted, short-term picture loss may occur when switching between encrypted and unencrypted services.

Setting the operating voltage for the CA module


In this menu the operating voltage for the CA module can be set.

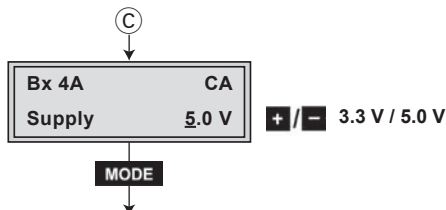

- Use the **+/−** buttons to set the operating voltage for the CA module ("**3.3 V**" / "**5.0 V**").
- Press the **MODE** button.
 → The "Setting the PID monitoring" – "**CA**" menu is activated.

Setting the PID monitoring


The factory default of the PID monitoring is switched on. If particular PIDs are not decrypted the CI module is reset. Additionally dropouts may occur if several services are decrypted. To prevent this the PID monitoring can be switched off.

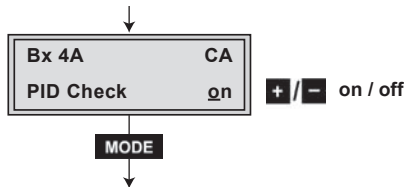

- Use the **+/−** buttons to switch "**off**" or "**on**" the PID monitoring.
- Press the **MODE** button.
 → The "Configuring the CA module" – "**CA**" menu is activated.

Configuring the CA module

The menu varies according to which CA module you are using. For this reason, please refer to the operating manual of your particular CA module. The relevant information is shown in the display of the head-end station. This may appear as a fixed display or as scrolling text according to display capabilities.

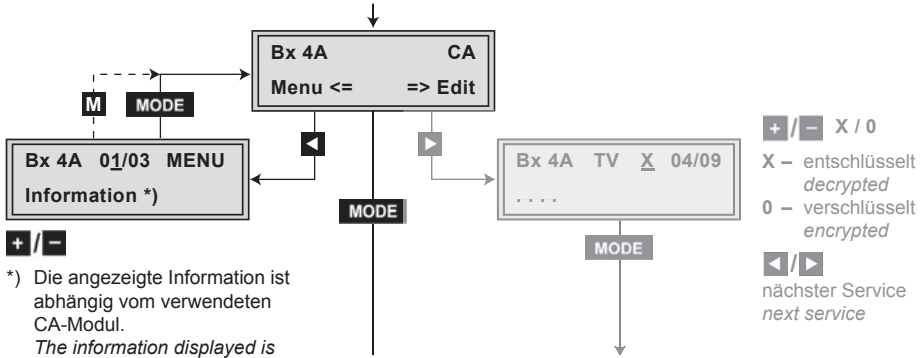

*) Die angezeigte Information ist abhängig vom verwendeten CA-Modul.
The information displayed is dependent on the CA module used.

→ By pressing the **MODE** button you can skip the "Configuring the CA module" – "CA" menu and activate the "Selecting the input data stream" – "INPUT" menu (page 19).

- Press the **◀** button to activate the menu of the CA module.
 → The display shows e.g.: **Bx 4A 01/03 MENU Information**

Meaning of the indicators:

- "Bx 4A" – Slot 4, channel strip "Tuner A"
- "01/03" – The first of three menu items is activated.
- "MENU" – The menu of the CA module is activated.

For the explanation of further details please use the operating instructions of the CA module used.


- Use the **+/-** buttons to activate the menu desired.
- Press the **▶** button to activate the menu.
- Use the **+/-** buttons to select the function desired.
- To set the CA module use the **◀/▶** and **+/-** buttons.
- All settings are saved by pressing the **M** button.
 - You will be returned to the "Configuring the CA module" – "**CA**" menu item.
 - By pressing the **MODE** button you can cancel the settings in the menu of the CA module and are returned to the "Configuring the CA module" – "**CA**" menu.
- Press the **▶** button.
 - The "Decoding services" – "**Edit**" menu is activated.

Decoding services

In this menu you select the services wished from the encoded data stream, which are to be decoded.

→ The display shows e.g.: **Bx 4A TV X 04/09**

....

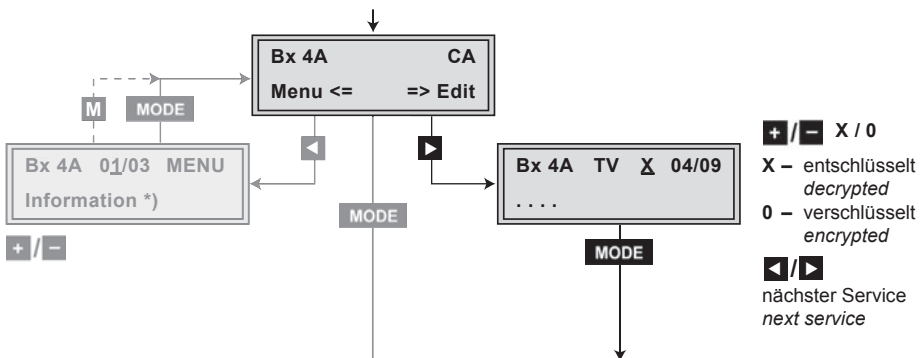

Meaning of the indicators in the example:

- "Bx 4A" – Slot 4, channel strip "**Tuner A**"
- "TV" – "Television" (type of service)
- "X" – The currently selected service is decrypted.
- "04/09" – The 4th of 9 services read is being displayed.
- "...." – Name of the service

Further possible terms displayed:


- "RA" – "Radio" (type of service)
- "0" – The currently selected service is encrypted.

- Use the ◀/▶ buttons to call up the services in sequential order which are to be decoded, then use + / - to decrypt ("X") or not to decrypt them ("0").

- Save changes and activate the filter:

Press the **MODE** button.

→ The filter is activated. The display shows the "Configuring the CA module" – "CA" menu.

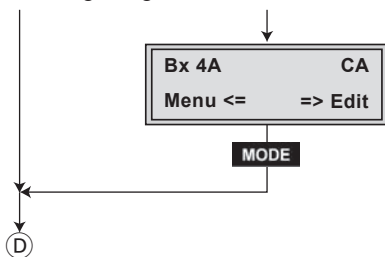

- Press the **MODE** button.
→ The "Selecting the input data stream" – "INPUT" menu is activated (page 19).

6 Final procedures



After installing the head-end station, upgrading accessories or installing cassettes it is necessary to tighten all cable connections, cable terminals and cover screws in order to maintain compliance with current EMC regulations securely.

- Securely tighten the cable bolted connections using an appropriate opened spanner.
- Mount the front cover (s. assembly instructions of the head-end station).

Service:

Phone: +49 (0) 911 / 703 2221
Fax: +49 (0) 911 / 703 2326
Email: service@gss.de